


Lovibond® Water Testing

Tintometer® Group



Manual of Methods

MD50 • MD150

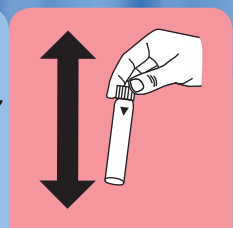

KS4.3 T / 20


Method name

Method number

Bar code for the detection of the methods

Measuring range

20

S:4.3

Display in the MD 100 / MD 110 / MD 200

Chemical Method

Instrument specific information

The test can be performed on the following devices. In addition, the required cuvette and the absorption range of the photometer are indicated.

Instrument Type	Cuvette	λ	Measuring Range
MD 200, MD 600, MD 610, MD 640, MultiDirect, PM 620, PM 630	ø 24 mm	610 nm	0.1 - 4 mmol/l $K_{S4.3}$
SpectroDirect, XD 7000, XD 7500	ø 24 mm	615 nm	0.1 - 4 mmol/l $K_{S4.3}$

Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
Alka-M-Photometer	Tablet / 100	513210BT
Alka-M-Photometer	Tablet / 250	513211BT

Application List

- Waste Water Treatment
- Drinking Water Treatment
- Raw Water Treatment

Notes

1. The terms Alkalinity-m, m-Value, total alkalinity and Acid demand to $K_{S4.3}$ are identical.
2. For accurate results, exactly 10 ml of water sample must be used for the test.

Language codes ISO 639-1

Revision status

EN Handbook of Methods 01/20

Performing test procedure

Implementation of the provision Acid capacity $K_{S_{4.3}}$ with Tablet

Select the method on the device


For this method, no ZERO measurements are to be carried out with the following devices: XD 7000, XD 7500



Fill 24 mm vial with **10 ml sample**.




Close vial(s).

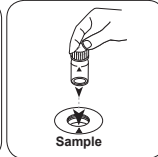


Place **sample vial** in the sample chamber. • Pay attention to the positioning.

• • •

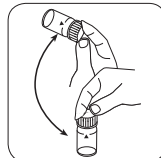

Dissolve tablet(s) by inverting.

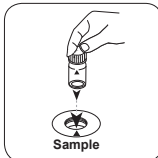

Place **sample vial** in the sample chamber. • Pay attention to the positioning.



Press the **TEST (XD: START)** button.

The result in Acid Capacity $K_{S_{4.3}}$ appears on the display.



Copper T

M150

0.05 - 5 mg/L Cu^{a)}

Cu

Biquinoline

EN

Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
Copper No. 1	Tablet / 100	513550BT
Copper No. 1	Tablet / 250	513551BT
Copper No. 2	Tablet / 100	513560BT
Copper No. 2	Tablet / 250	513561BT
Set Copper No. 1/No. 2 100 Pc.#	100 each	517691BT
Set Copper No. 1/No. 2 250 Pc.#	250 each	517692BT

Preparation

1. Strong alkaline or acidic water samples must be adjusted to pH 4 to 6 before analysis.

Determination of Copper, free with tablet


Select the method on the device.

In addition, choose the test: free


For this method, a ZERO measurement does not have to be carried out every time on the following devices: XD 7000, XD 7500




Fill 24 mm vial with **10 mL sample**.

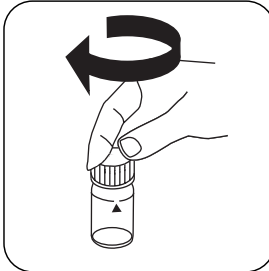


Close vial(s).

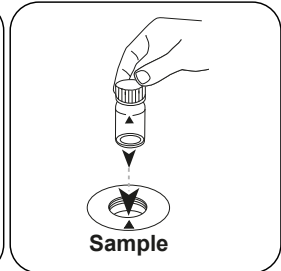

Place **sample vial** in the sample chamber. Pay attention to the positioning.

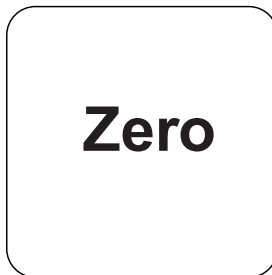


Press the **ZERO** button.

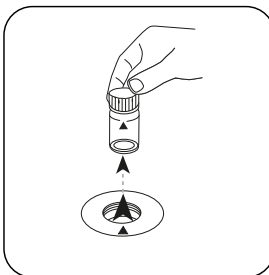


Remove the vial from the sample chamber.


For devices that require **no ZERO measurement**, start here.

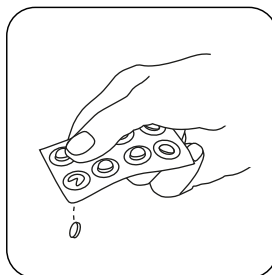


Add **COPPER No. 1 tablet**.

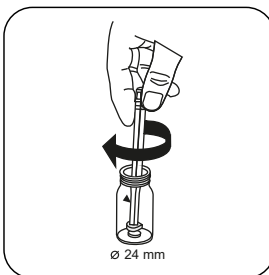


Crush tablet(s) by rotating slightly.

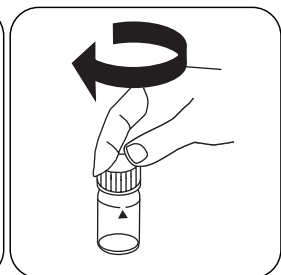


Close vial(s).

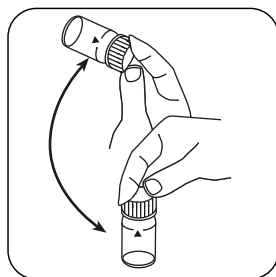


Dissolve tablet(s) by inverting.

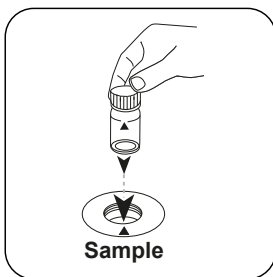

Place **sample vial** in the sample chamber. Pay attention to the positioning.

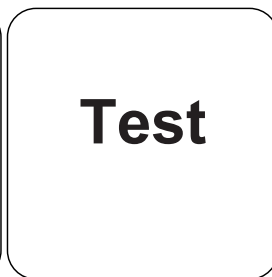

Press the **TEST** (XD: **START**) button.

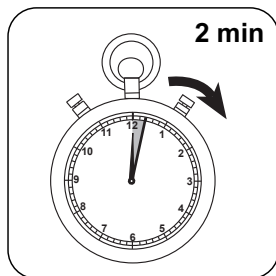

Wait for **2 minute(s)** reaction time.

Once the reaction period is finished, the measurement takes place automatically.

The result in mg/L free Copper appears on the display.

Determination of Copper, total with tablet


Select the method on the device.

In addition, choose the test: total


For this method, a ZERO measurement does not have to be carried out every time on the following devices: XD 7000, XD 7500



Fill 24 mm vial with **10 mL** sample.

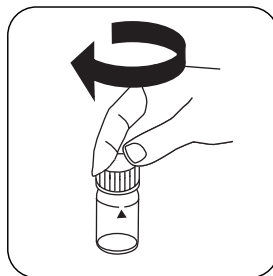


Close vial(s).

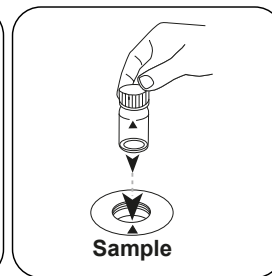

Place **sample vial** in the sample chamber. Pay attention to the positioning.




Zero

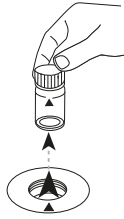


Press the **ZERO** button.

Remove the vial from the sample chamber.


For devices that require **no ZERO measurement**, start here.

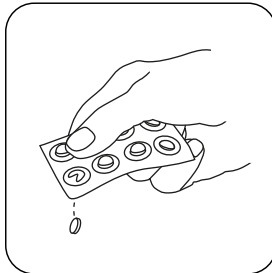


Add **COPPER No. 1 tablet**

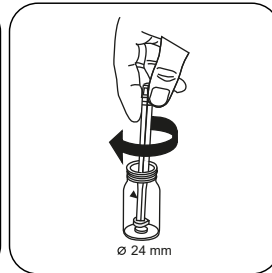


Crush tablet(s) by rotating slightly and dissolve.

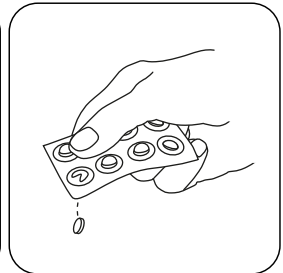


Add **COPPER No. 2 tablet**

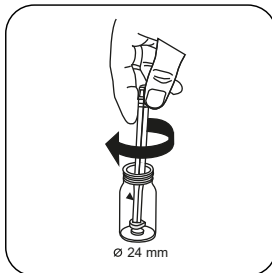


Crush tablet(s) by rotating slightly.

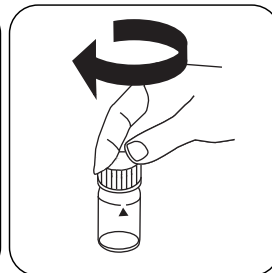


Close vial(s).

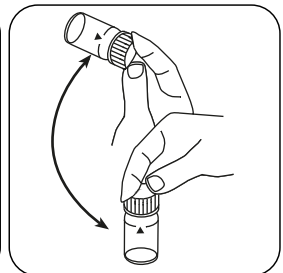


Dissolve tablet(s) by inverting.

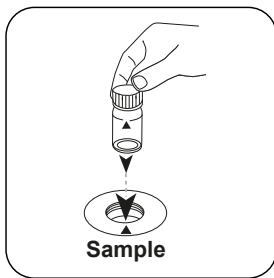

Place **sample vial** in the sample chamber. Pay attention to the positioning.

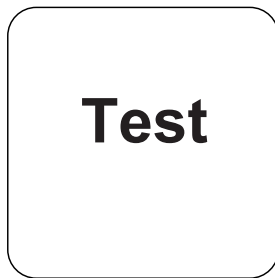

Press the **TEST** (XD: **START**) button.

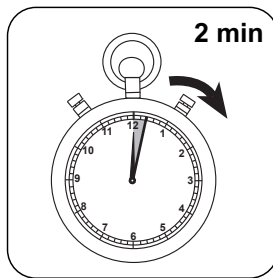

Wait for **2 minute(s)** reaction time.

Once the reaction period is finished, the measurement takes place automatically.

The result in mg/L total Copper appears on the display.

Determination of Copper, differentiated determination with Tablet


Select the method on the device.

In addition, choose the test: differentiated


For this method, a ZERO measurement does not have to be carried out every time on the following devices: XD 7000, XD 7500




Fill 24 mm vial with **10 mL** sample.

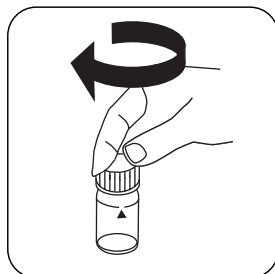


Close vial(s).

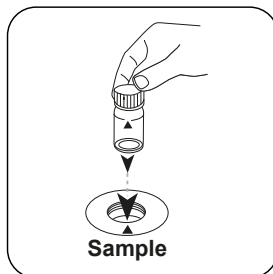

Place **sample vial** in the sample chamber. Pay attention to the positioning.

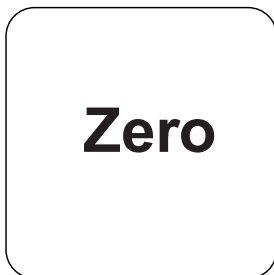


Press the **ZERO** button.

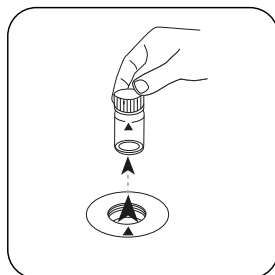


Remove the vial from the sample chamber.


For devices that require **no ZERO measurement**, start here.

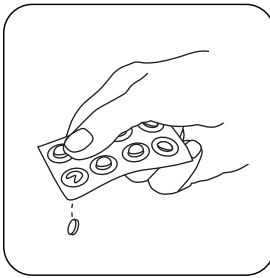


Add **COPPER No. 1 tablet**

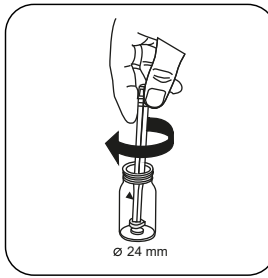


Crush tablet(s) by rotating slightly.

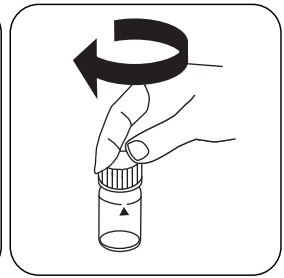


Close vial(s).

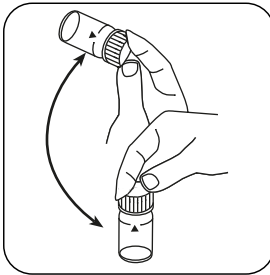


Dissolve tablet(s) by inverting.

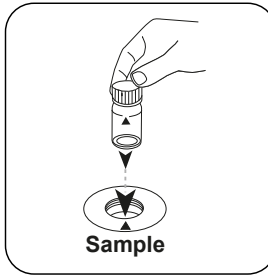


Place **sample vial** in the sample chamber. Pay attention to the positioning.

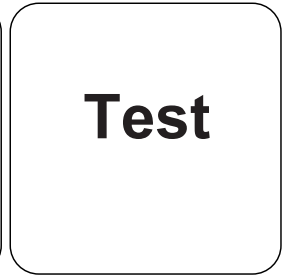


Press the **TEST (XD: START)** button.

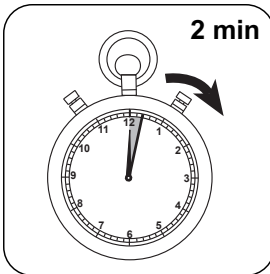


Wait for **2 minute(s) reaction time**.

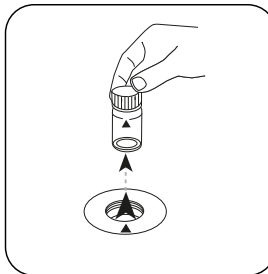


Remove the vial from the sample chamber.

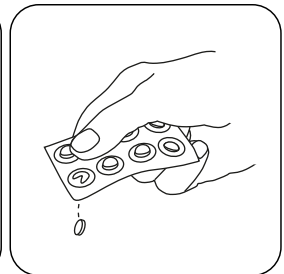


Add **COPPER No. 2 tablet**.

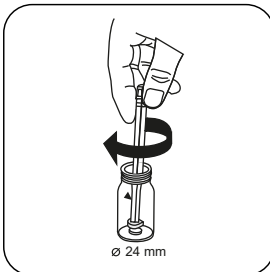


Crush tablet(s) by rotating slightly.

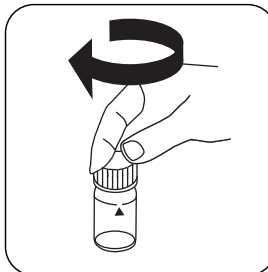


Close vial(s).

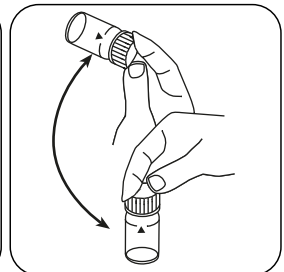


Dissolve tablet(s) by inverting.

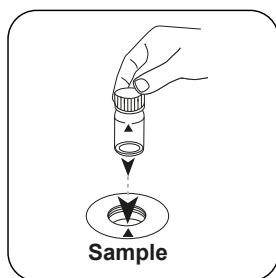

Place **sample vial** in the sample chamber. Pay attention to the positioning.

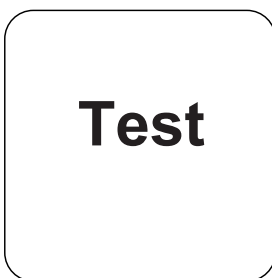

Press the **TEST** (XD: **START**) button.

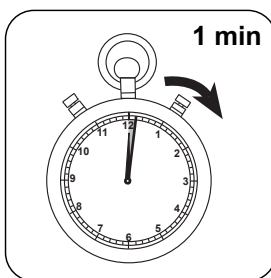

Wait for **1 minute(s) reaction time**.

Once the reaction period is finished, the measurement takes place automatically.

The result in mg/L free Copper; combined Copper; total Copper appears on the display.

Chemical Method

Biquinoline

Appendix

Interferences

Persistent Interferences

1. Cyanide CN^- and Silver Ag^+ interfere with the test result.

Method Validation

Limit of Detection	0.05 mg/L
Limit of Quantification	0.15 mg/L
End of Measuring Range	5 mg/L
Sensitivity	3.8 mg/L / Abs
Confidence Intervall	0.026 mg/L
Standard Deviation	0.011 mg/L
Variation Coefficient	0.42 %

Bibliography

Photometrische Analyse, Lange/Vedjerek, Verlag Chemie 1980

^{a)} determination of free, combined and total | ^{*} including stirring rod, 10 cm



Copper PP

M153

0.05 - 5 mg/L Cu

Cu

Bicinchoninate

EN

Material

Required material (partly optional):

Reagents	Packaging Unit	Part Number
VARIO CU1 F10	Powder / 100 pc.	530300
VARIO CU1 F10	Powder / 1000 pc.	530303

Preparation

1. Digestion is required for the determination of total copper.
2. The pH value of the sample must be adjusted between 4 and 6 before analysis (with potassium hydroxide solution or nitric acid). Any resulting dilution must be taken into account in the result.

Note: pH values above 6 can lead to Copper precipitation.

Notes

1. Accuracy is not affected by undissolved powder.


Determination of Copper, free with Vario Powder Pack

Select the method on the device.


For this method, a ZERO measurement does not have to be carried out every time on the following devices: XD 7000, XD 7500




Fill 24 mm vial with **10 mL sample**.

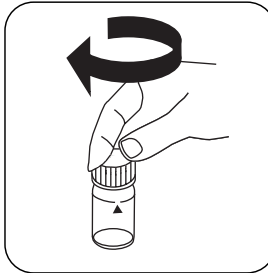


Close vial(s).

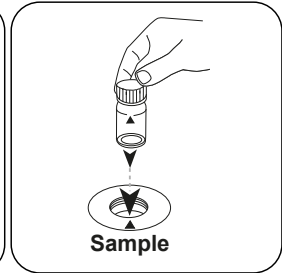

Place **sample vial** in the sample chamber. Pay attention to the positioning.

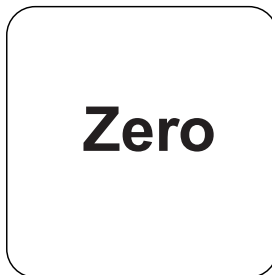


Press the **ZERO** button.

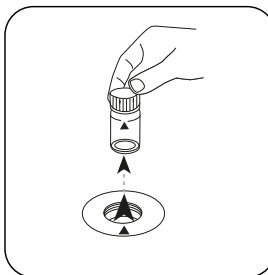


Remove the vial from the sample chamber.


For devices that require **no ZERO measurement**, start here.

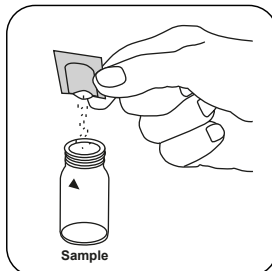


Add **Vario Cu 1 F10 powder pack**.

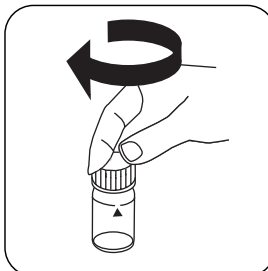


Close vial(s).

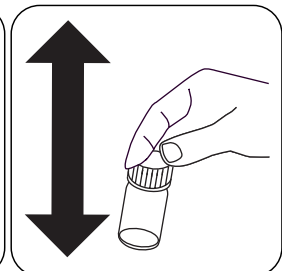


Mix the contents by shaking.

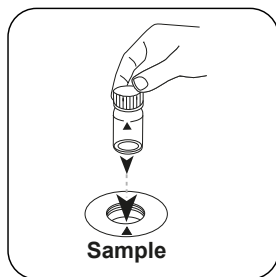

Place **sample vial** in the sample chamber. Pay attention to the positioning.

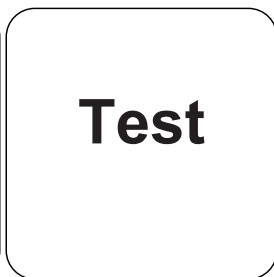

Press the **TEST** (XD: **START**) button.

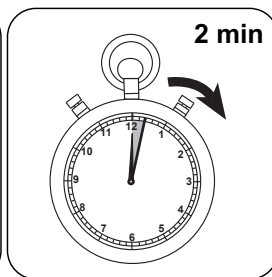

Wait for **2 minute(s) reaction time**.

Once the reaction period is finished, the measurement takes place automatically.

The result in mg/L Copper appears on the display.

Chemical Method

Bicinchoninate

Appendix

Interferences

Persistent Interferences

Hardness, Al and Fe produce lower test results.

Removeable Interferences

1. Cyanide, CN⁻: Cyanide prevents full colour development. Cyanide interference is eliminated as follows: Add 0.2 ml Formaldehyde to 10 ml water sample and wait for a reaction time of 4 minutes. (Cyanide is masked). After this perform the test as described. Multiply the result by 1.02 to correct the sample dilution by Formaldehyde.
2. Silver, Ag⁺: If a turbidity remains and turns black, silver interference is likely. Add 10 drops of saturated Potassium chloride solution to 75 ml of water sample and filter it through a fine filter. Use 10 ml of the filtered water sample to perform test.

Method Validation

Limit of Detection	0.05 mg/L
Limit of Quantification	0.15 mg/L
End of Measuring Range	5 mg/L
Sensitivity	3.77 mg/L / Abs
Confidence Intervall	0.064 mg/L
Standard Deviation	0.027 mg/L
Variation Coefficient	1.07 %

Bibliography

S. Nakano, Y. Zasshi, 82 486 - 491 (1962) [Chemical Abstracts, 58 3390e (1963)]

Derived from

APHA Method 3500Cu

Tintometer GmbH

Lovibond® Water Testing
Schleefstraße 8-12
44287 Dortmund
Tel.: +49 (0)231/94510-0
sales@lovibond.com
www.lovibond.com
Germany

Tintometer South East Asia

Unit B-3-12, BBT One Boulevard,
Lebuhr Nilam 2, Bandar Bukit Tinggi,
Klang, 41200, Selangor D.E
Tel.: +60 (0)3 3325 2285/6
Fax: +60 (0)3 3325 2287
lovibond.asia@tintometer.com
www.lovibond.com
Malaysia

Tintometer India Pvt. Ltd.

Door No: 7-2-C-14, 2nd, 3rd & 4th Floor
Sanathnagar Industrial Estate,
Hyderabad, 500018
Telangana
Tel: +91 (0) 40 23883300
Toll Free: 1 800 599 3891/ 3892
indiaoffice@lovibond.in
www.lovibondwater.in
India

The Tintometer Limited

Lovibond House
Sun Rise Way
Amesbury, SP4 7GR
Tel.: +44 (0)1980 664800
Fax: +44 (0)1980 625412
sales@lovibond.uk
www.lovibond.com
UK

Tintometer Brazil

Caixa Postal: 271
CEP: 13201-970
Jundiaí – SP
Tel.: +55 (11) 3230-6410
sales@lovibond.us
www.lovibond.com.br
Brazil

Tintometer Spain

Postbox: 24047
08080 Barcelona
Tel.: +34 661 606 770
sales@tintometer.es
www.lovibond.com
Spain

Tintometer China

9F, SOHO II C.
No.9 Guanghualu,
Chaoyang District,
Beijing, 100020
Customer Care China Tel.: 4009021628
Tel.: +86 10 85251111 Ext. 330
Fax: +86 10 85251001
chinaoffice@tintometer.com
www.lovibond.com
China

Tintometer Inc.

6456 Parkland Drive
Sarasota, FL 34243
Tel: 941.756.6410
Fax: 941.727.9654
sales@lovibond.us
www.lovibond.us
USA



Technical changes without notice
Printed in Germany 08/24

No.: 00386769

Lovibond® and Tintometer® are Trademarks of
the Tintometer Group of Companies

